


How To Read Your Gas Meter


Imperial Gas Meter Reading

To read an imperial meter, record the numbers left to right as indicated by the dial pointers on the four dials. If the dial pointer is between two numbers, read the lowest of the two numbers except when the dial pointer is between 0 and 9, in which case you would record the number 9.

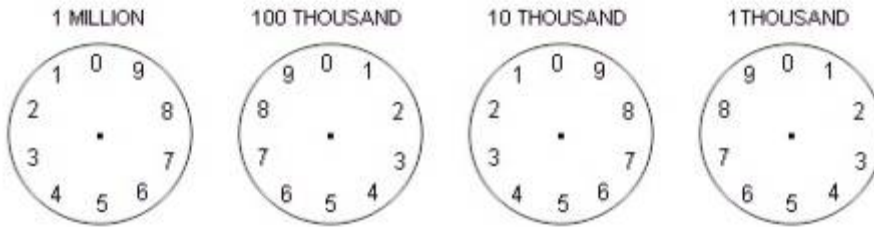

Metric Gas Meter Reading

The metric design has five numbers in a row and measures gas in cubic meters. To read a metric gas meter, read the numbers from left to right just as you would a car odometer.

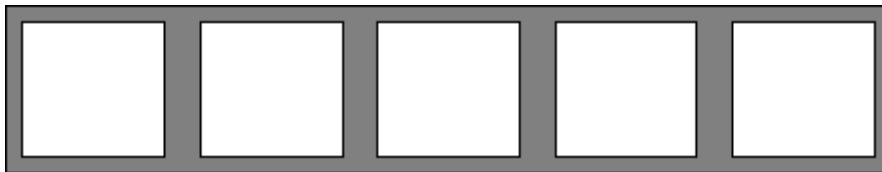

Gas Meter Number

The gas meter number is located on a plate below the imperial dials or metric dials. This is a seven-digit number.

